


CLUTCH AND CONTROLS

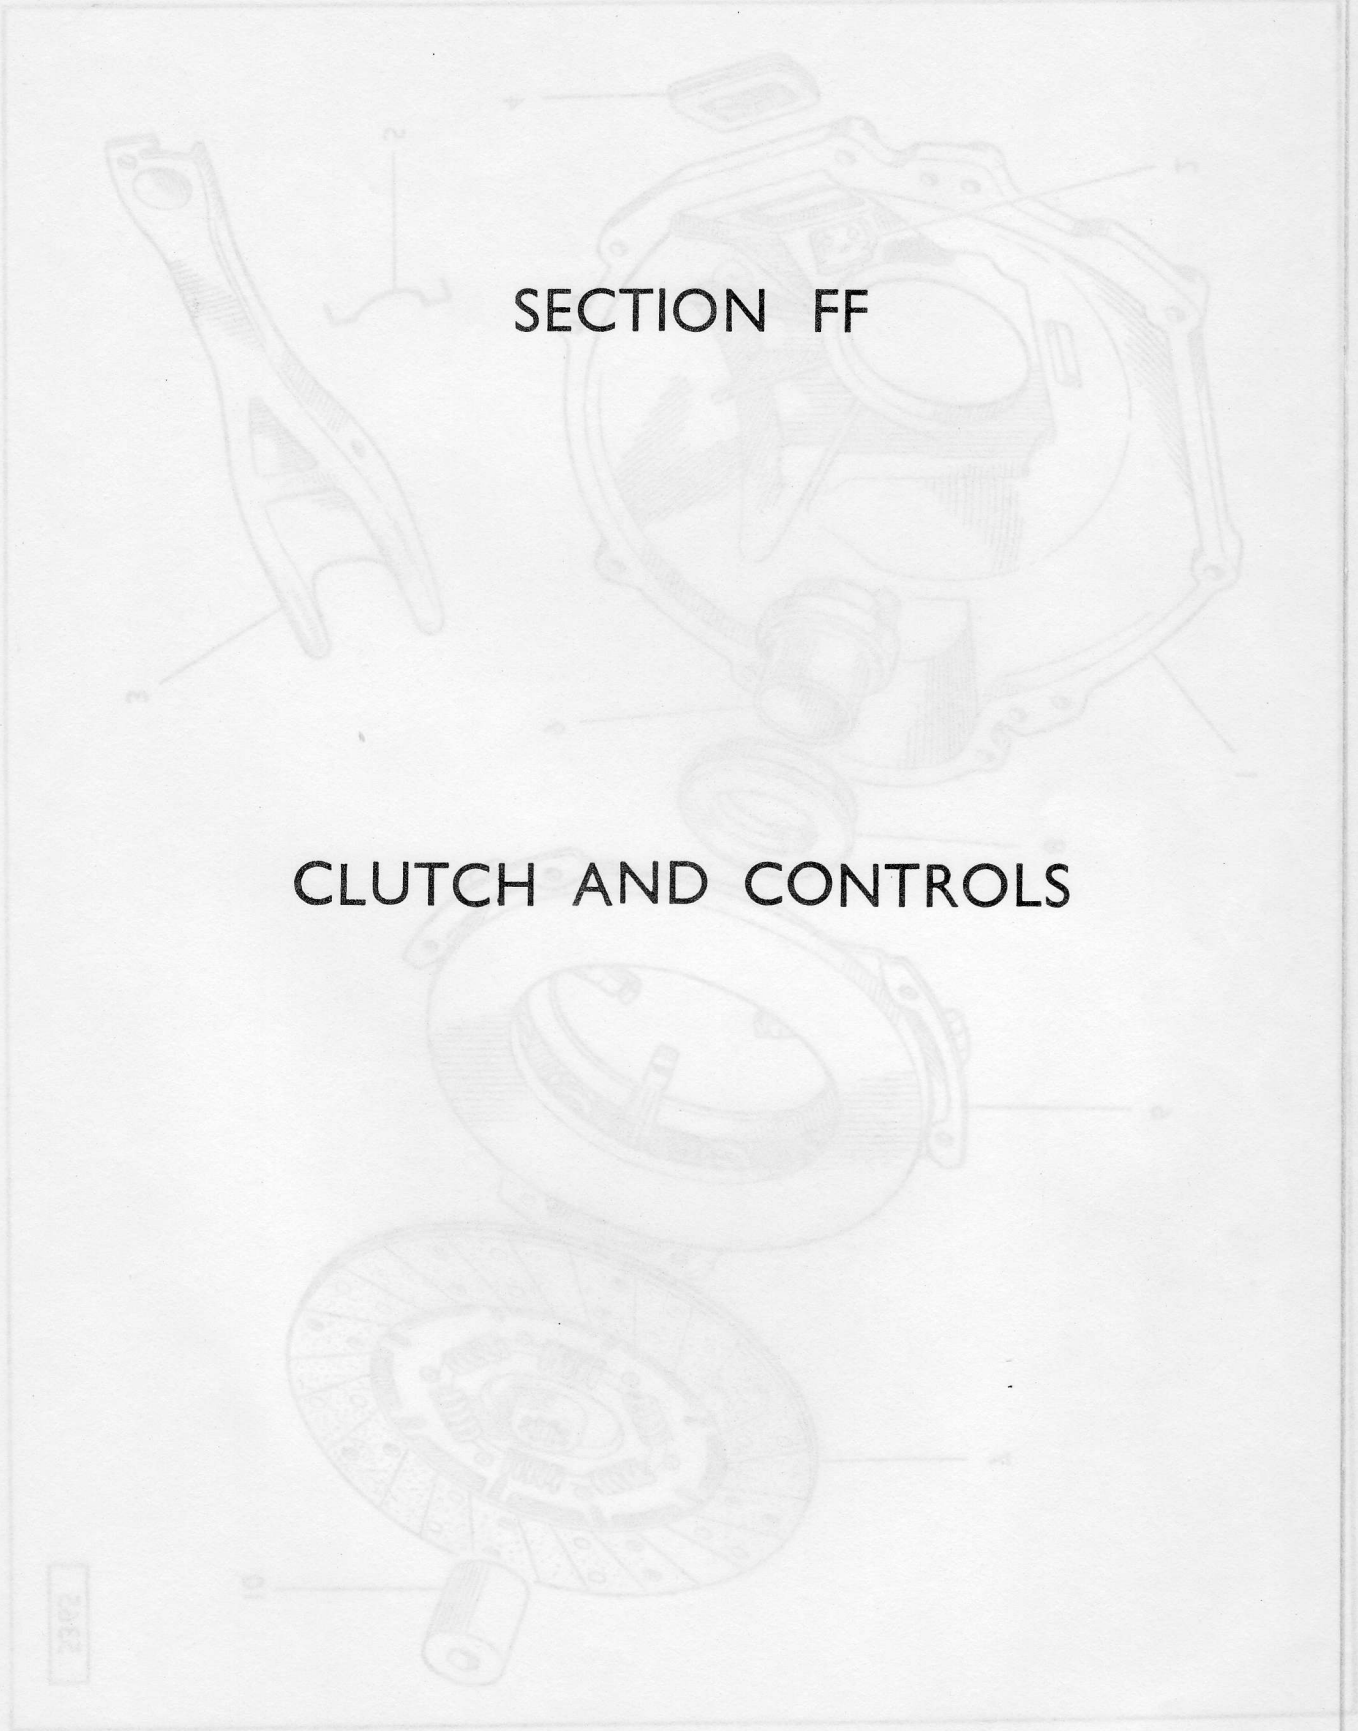


SECTION FF

CLUTCH AND CONTROLS

20432

SECTION FF

CLUTCH AND CONTROLS

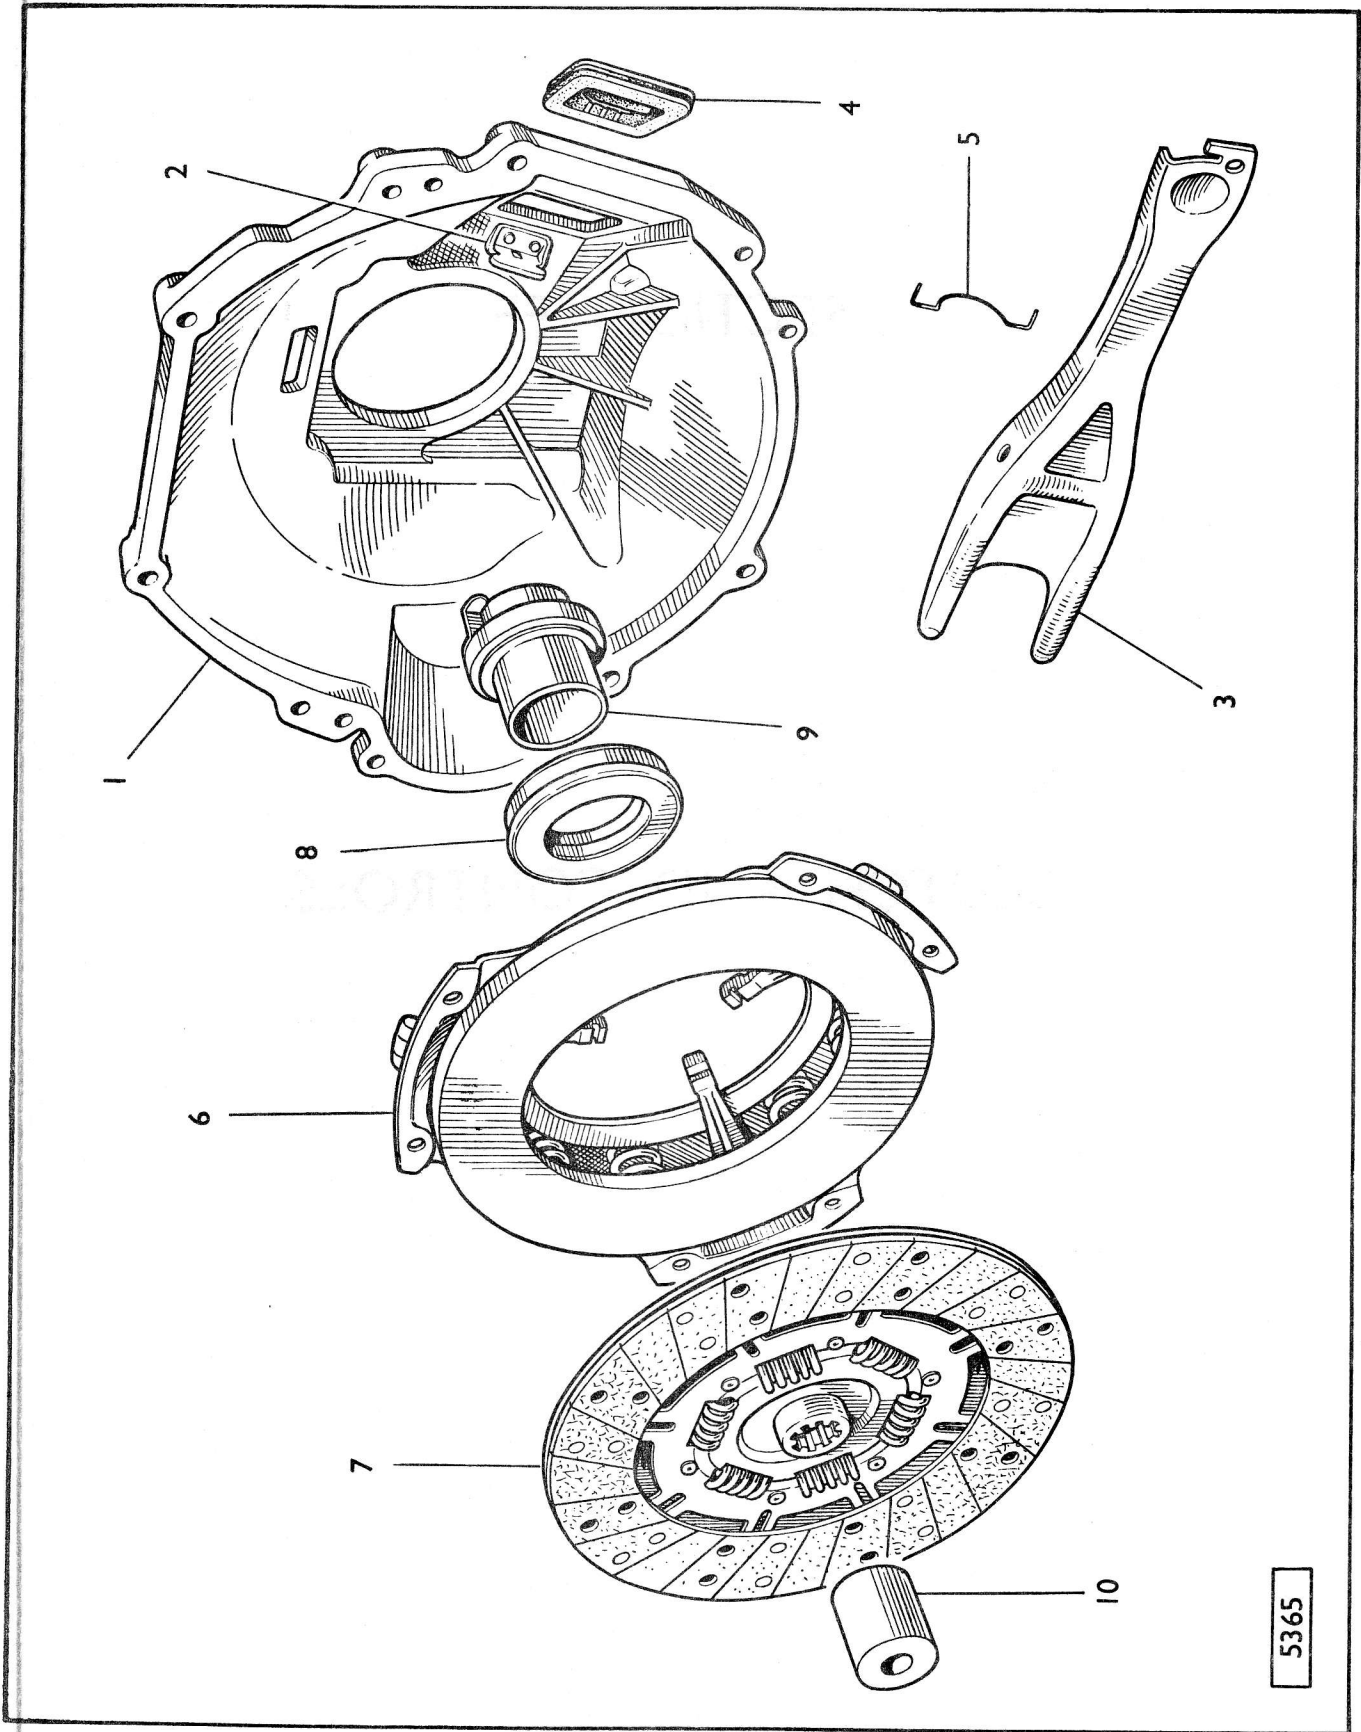

SECTION FF

5365

CLUTCH AND CONTROLS

Plate Ref.	Rootes Part Number	DESCRIPTION	No. per Veh.	REMARKS
1	6100160	CLUTCH BELL HOUSING	1	Mk. I
	6100881	CLUTCH BELL HOUSING	1	Mk. II
2		Bracket—Release lever		} Not supplied
		Rivet, $\frac{5}{16}$ "—Bracket to bell housing		
3	6100278	Release lever	1	Mk. I
	6100856	Release lever	1	Mk. II
4	6100276	Dust shield	1	Mk. I
	6100880	Dust shield } Release lever	1	Mk. II
5	6100487	Spring	1	
6	6100280	CLUTCH COVER AND PRESSURE PLATE ASSEMBLY	1	Mk. I models with 10" dia. disc (Driven plate)
	6100759	CLUTCH COVER AND PRESSURE PLATE ASSEMBLY	1	Mk. I and II models with 10-4" dia. disc (Driven plate)
7	6100279	CLUTCH DISC (Driven Plate) ASSEMBLY	1	10" Dia.—Mk. I
	6100758	CLUTCH DISC (Driven Plate) ASSEMBLY	1	10-4" Dia.—Mk. I and II
8	6100001	Release bearing	1	
9	6100042	Hub assembly—Clutch release bearing	1	
10	6100439	Pilot bearing	1	Mk. I
	6100857	Pilot bearing	1	Mk. II
	6100275	Engine (Motor) rear cover plate	1	Mk. I
	6100858	Engine (Motor) rear cover plate	1	} Mk. II
	6100859	Seal—Cover plate	1	
	1224744	SLAVE CYLINDER	1	
	5042680	Piston	1	
	5042679	Dust cover	1	
	5037676	Seal	1	
	5220157	Spring	1	
	K.21836	Dust cap	1	
	9187004	Ball, $\frac{3}{8}$ " dia.	1	
	K.26371	Bleeder screw	1	
	5042677	SLAVE CYLINDER REPAIR KIT	1	
	1224655	Bracket } Slave cylinder	1	Mk. I
	1236187	Bracket } mounting	1	Mk. II
	19406221	Bolt, $\frac{3}{8}$ " U.N.C. \times 2 $\frac{3}{4}$ " Hex. } Bracket to	1	} Superseded by 1224742
	19406261	Bolt, $\frac{3}{8}$ " U.N.C. \times 3 $\frac{1}{4}$ " Hex. } clutch housing	1	
	1224702	Push rod	1	
	1224742	Push rod } Slave cylinder	1	Mk. I
	1236190	Push rod }	1	Mk. II
	1224743	Nut—Ball end—Push rod	1	
	1224745	Clip—Push rod to release lever spring	1	
	1229807	CLUTCH PEDAL, R.H.D.	1	} Up to B9473714
	1224677	CLUTCH PEDAL, L.H.D.	1	
	1236044	CLUTCH PEDAL, R.H.D.	1	
	1236050	CLUTCH PEDAL, L.H.D.	1	Mk. I from B9473715 and Mk. II
	1206069	Rubber pad } Clutch	1	Up to B9473714
	1217859	Rubber pad } pedal	1	From B9473715
	1224747	MASTER CYLINDER	1	
	5039060	Filler cap	1	
	9122249	Gasket—Filler cap	1	
	5030670	Valve seal	1	

CLUTCH AND CONTROLS

Plate Ref.	Roots Part Number	DESCRIPTION	No. per Veh.	REMARKS
		MASTER CYLINDER—continued		
	5030672	Spring washer—Valve seal	1	
	5030671	Valve spacer	1	
	5030669	Valve stem	1	
	5030668	Spring	1	
	5038424	Spring retainer	1	
	5042682	Plunger	1	
	5042681	Plunger seal	1	
	5042683	Push rod	1	
	9207208	Circlip—Push rod retaining	1	
	5030675	Dust cover	1	
	5042678	MASTER CYLINDER REPAIR KIT		
	1201746	Packing—Master cylinder	1	Mk. II
	1229822	PIPE, R.H.D. } Clutch master cylinder	1	} Mk. I
	1224737	PIPE, L.H.D. } to	1	
	9163373	PIPE, L.H.D. } slave cylinder	1	